




LAND ROVER
Freelander

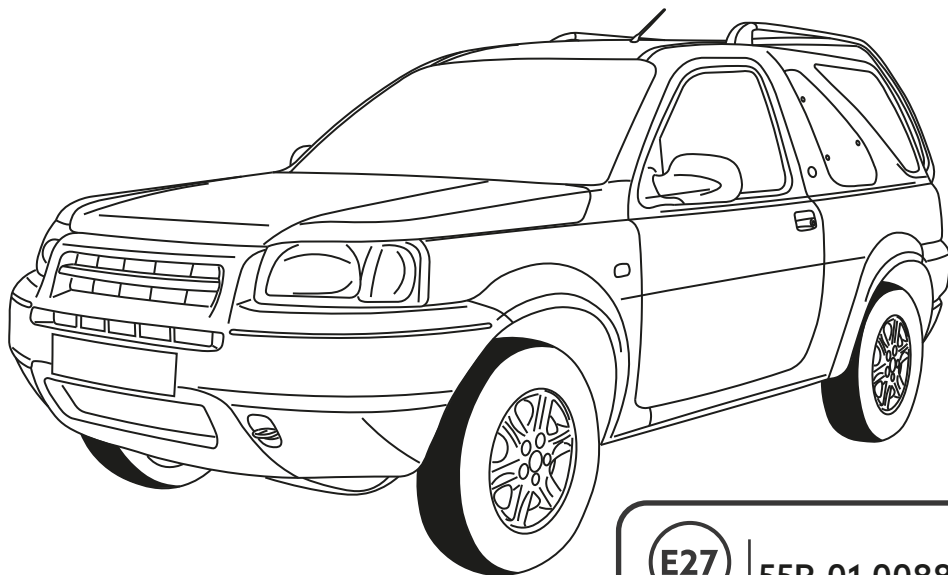


1998 - 2007



E27


55R-01 0088 00

$$D = \frac{\text{MAX kg} \times \text{MAX kg}}{\text{MAX kg} + \text{MAX kg}} \times 0,00981$$

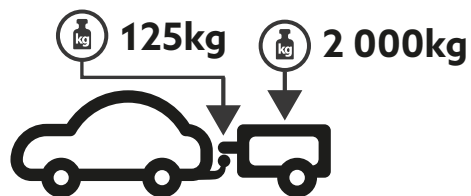

$$D = 10,28\text{kN}$$

- M10x35 - 6x
- M12x30 - 4x
- M12x1,25x80 - 2x
- M12x70 - 2x (A)
- M12x90 - 2x (C)
- M12x19 - 3x (C)
- M12x21 - 1x (C)
- PP10 - 6x
- PP12 - 8x (A, I)
- PP12 - 10x (C)
- M12 - 6x (A, I)
- M12 - 4x (C)


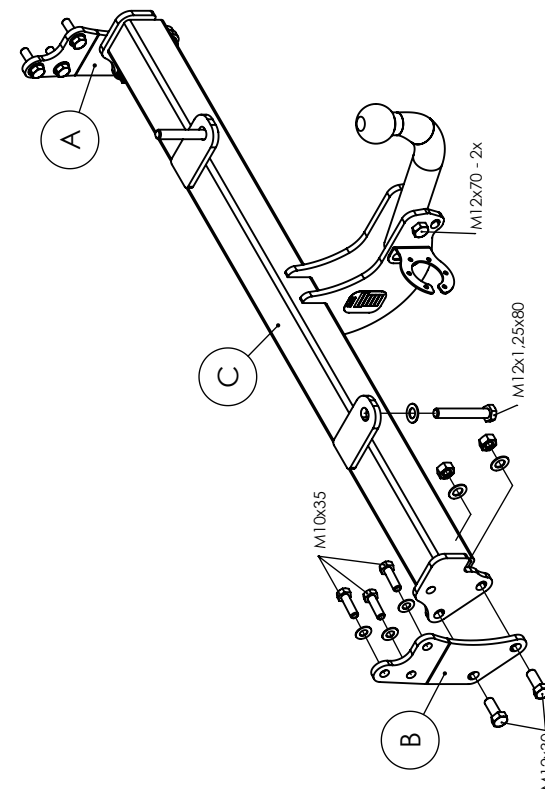


A

LAND ROVER FREELANDER
Kód: R0496(A,I,C) 2. 3. 2024

A/C 325 12 2

C

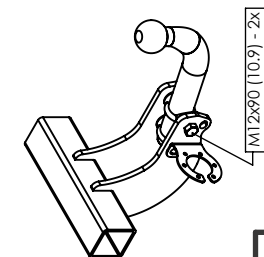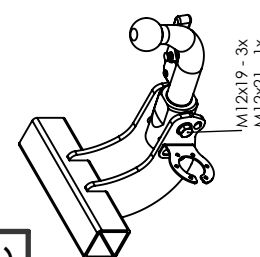

I



Location
Vlachy 142, 032 13 Vlachy



Phone
+ 421 44 55 93 434



Website
www.galia.sk



Email
galia@galia.sk



Location
Vlachy 142, 032 13 Vlachy



Phone
+ 421 44 55 93 434




Website
www.galia.sk




Email
galia@galia.sk

1

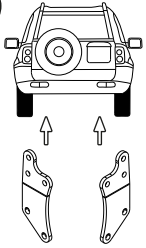


	M10x35 6x
	PP10 6x

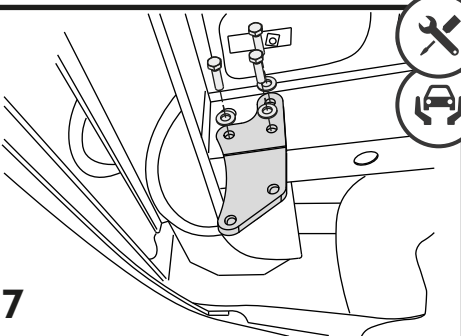




**17**

2

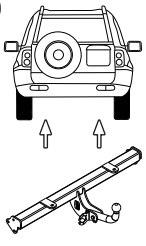


	M12x30 4x
	PP12 4x
	M12 4x

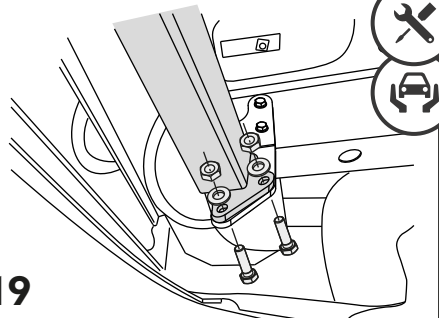




**19**

3

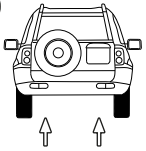

	M12x1,25x80 2x
	PP12 2x

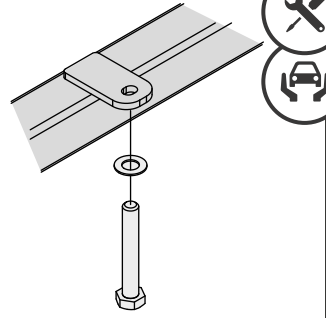



**19**